

**CT7731  
CT7736  
CT7742** AC/DC AUTO-ZERO  
CURRENT SENSOR

**Instruction Manual**

Dec. 2015 Revised edition 1  
Printed in Japan  
CT7731A961-01 15-12H

**EN**



HIOKI E. E. CORPORATION

**HEADQUARTERS**  
81 Koizumi, Ueda, Nagano 386-1192, Japan  
TEL +81-268-28-0562 FAX +81-268-28-0568  
os-com@hioki.co.jp [www.hioki.com](http://www.hioki.com)  
(International Sales Department)

1502EN

Please visit our website at [www.hioki.com](http://www.hioki.com) for the following:  
• Regional contact information  
• The latest revisions of instruction manuals and manuals in other languages.  
• Declarations of Conformity for instruments that comply with CE mark requirements.

**Warranty Certificate**

Model	Serial No.	Warranty period
		Three (3) years from date of purchase ( ___ / ___ )

This product passed a rigorous inspection process at Hioki before being shipped.

In the unlikely event that you experience an issue during use, please contact the distributor from which you purchased the product, which will be repaired free of charge subject to the provisions of this Warranty Certificate. This warranty is valid for a period of three (3) years from the date of purchase. If the date of purchase is unknown, the warranty is considered valid for a period of three (3) years from the product's date of manufacture. Please present this Warranty Certificate when contacting the distributor. Accuracy is guaranteed for the duration of the separately indicated guaranteed accuracy period.

- Malfunctions occurring during the warranty period under conditions of normal use in conformity with the Instruction Manual, product labeling (including stamped markings), and other precautionary information will be repaired free of charge, up to the original purchase price. Hioki reserves the right to decline to offer repair, calibration, and other services for reasons that include, but are not limited to, passage of time since the product's manufacture, discontinuation of production of parts, or unforeseen circumstances.
- Malfunctions that are determined by Hioki to have occurred under one or more of the following conditions are considered to be outside the scope of warranty coverage, even if the event in question occurs during the warranty period:
  - Damage to objects under measurement or other secondary or tertiary damage caused by use of the product or its measurement results
  - Malfunctions caused by improper handling or use of the product in a manner that does not conform with the provisions of the Instruction Manual
  - Malfunctions or damage caused by repair, adjustment, or modification of the product by a company, organization, or individual not approved by Hioki
  - Consumption of product parts, including as described in the Instruction Manual
  - Malfunctions or damage caused by transport, dropping, or other handling of the product after purchase
  - Changes in the product's appearance (scratches on its enclosure, etc.)
  - Malfunctions or damage caused by fire, wind or flood damage, earthquakes, lightning, power supply anomalies (including voltage, frequency, etc.), war or civil disturbances, radioactive contamination, or other acts of God
  - Damage caused by connecting the product to a network
  - Failure to present this Warranty Certificate
  - Failure to notify Hioki in advance if used in special embedded applications (space equipment, aviation equipment, nuclear power equipment, life-critical medical equipment or vehicle control equipment, etc.)
  - Other malfunctions for which Hioki is not deemed to be responsible

\*Requests  
• Hioki is not able to reissue this Warranty Certificate, so please store it carefully.  
• Please fill in the model, serial number, and date of purchase on this form.

13-09

**HIOKI E. E. CORPORATION**  
81 Koizumi, Ueda, Nagano 386-1192, Japan  
TEL: +81-268-28-0555  
FAX: +81-268-28-0559

**Introduction**

Thank you for purchasing the Hioki CT7731, CT7736, CT7742 AC/DC Auto-Zero Current Sensor. To obtain maximum performance from the device, please read this manual first, and keep it handy for future reference.

Be sure to also read the separate booklet "Current Sensor Operating Precautions" before use.

**Troubleshooting**


If the device seems to be malfunctioning, contact your authorized Hioki distributor or reseller.

**Overview**

This current sensor has a Hioki PL14 output connector, enabling it to be automatically recognized when connected to a compatible instrument for simple setup. Furthermore, its features include reduced zero-point variability caused by temperature, making it well suited to applications characterized by temperature variations, for example continuous measurement during daytime and nighttime hours.

**Parts Names**

Example: CT7736

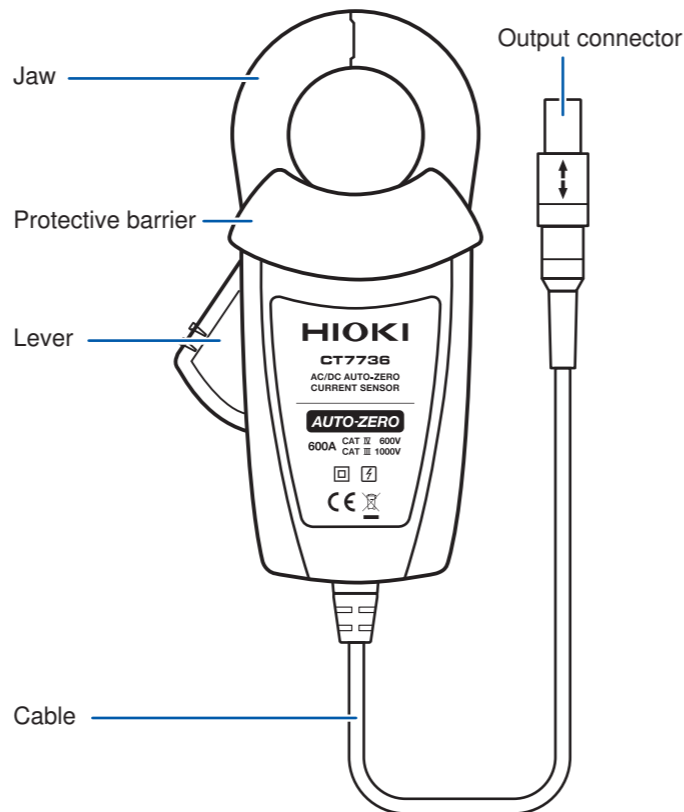


**Measurement Methods**

**Inspection Before Use**

Verify that the device operates normally to ensure that no damage occurred during storage or shipping. If you find any damage, contact your authorized Hioki distributor or reseller.


Check Items	Remedy
Is the jaw cracked or damaged?	If there is any damage, electric shock may result. Discontinue use and contact your authorized Hioki distributor or reseller.
Is the cable insulation torn?	
Is the cable broken at the base (of the connector or grip)?	Broken connections will make proper measurement impossible. Discontinue use and contact your authorized Hioki distributor or reseller.

- Attach the clamp around only one conductor. If you clamp single-phase (2-wire) or three-phase (3-wire) conductors together, the device will not be able to make a measurement.

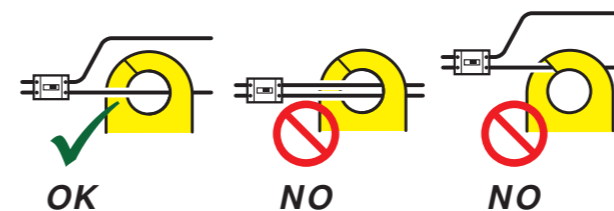

- When a conductor to be measured is clamped in the center of the jaw, measurement is performed the most accurately, with no effect of the conductor position.
- To measure low current levels, multiple windings may be used to increase relative sensitivity (10 windings multiplies the measured current by a factor of 10). However, in this case, the windings should be made radially, with a diameter of at least 20 cm.
- The reading may show a measurement greater than the actual value due to magnetic-field interference. The amount of interference varies depending on the sensor. For details, see "Magnetic-field interference" in Specifications.
- For more information about instrument operation and settings, see the instrument's instruction manual.

**1 Connect the device to the instrument.**

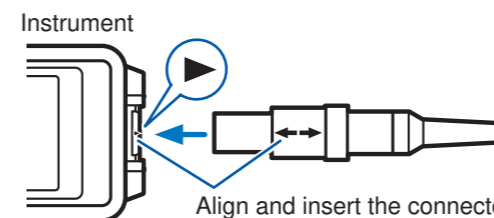


Align the arrow on the device's output connector with the ► on the compatible instrument's sensor input connector and insert the connector.

**2 Perform zero-adjustment. (DC measurement)**

Perform zero-adjustment under no-input conditions.

Once zero-adjustment has been performed, movement of the device's zero-point will be within the guaranteed range. Consequently, you must perform initial zero-adjustment before use.

**3 Clamp the conductor**

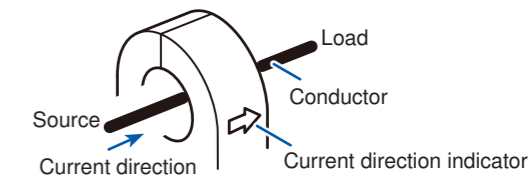

Gripping the lever to open the jaw, align the current direction indicator with the direction of the current in the conductor, and close the jaw with the conductor roughly centered in the jaw.  
If the phase is not an issue during AC measurement, the direction of current flow in the wire relative to the current direction indicator may be ignored.

Close the tips of the jaw completely before performing measurement. If the output cable is caught on the jaw or the jaw is forced into the measurement location, it may not close completely. If this occurs, it will not be possible to obtain an accurate measurement.

**4 Once measurement is complete, remove the device from the conductor and disconnect it from the instrument.**

When disconnecting the device from the instrument, grip the tip of the output connector (the part with the arrow) and pull the connector straight out.

Pulling forcibly on the base of the connector may damage the device.

**Specifications**

**General Specifications**

	CT7731	CT7736	CT7742
<b>Operating environment</b>	Indoors, pollution degree 2, altitude up to 2000 m (6562 ft.)		
<b>Operating temperature and humidity</b>	-25°C to 65°C (-13.0°F to 149.0°F), 80% RH or less (no condensation)		
<b>Storage temperature and humidity</b>	-25°C to 65°C (-13.0°F to 149.0°F), 80% RH or less (no condensation)		
<b>Dustproof and waterproof (EN60529)</b>	Jaw, barrier, grip: IP40	Jaw, barrier: IP50 Grip: IP54 (when measuring an insulated conductor only) Risk of electric shock from the conductor being measured increases when wet.	
<b>Standards</b>	Safety: EN61010 EMC: EN61326		
<b>Dielectric strength</b>	7.4 kV AC for 1 minute (between jaw and grip, between jaw and output connector)		
<b>Power consumption category</b>	Sensor power consumption category: 2 (See the continuous operating time for the instrument to which the device is to be connected.)		
<b>Dimensions</b>	(Not including dimensions of protruding parts, lever, or jaw) Approx. 58W × 132H × 18D mm (2.28"W × 5.20"H × 0.71"D)	Approx. 64W × 160H × 34D mm (2.52"W × 6.30"H × 1.34"D)	Approx. 64W × 195H × 34D mm (2.52"W × 7.68"H × 1.34"D)


	CT7731	CT7736	CT7742
<b>Jaw dimensions</b>	Approx. 66W × 13D mm (2.60"W × 0.51"D)	Approx. 69W × 14D mm (2.72"W × 0.55"D)	Approx. 92W × 18D mm (3.62"W × 0.71"D)
<b>Mass</b>	Approx. 250 g (8.8 oz.)	Approx. 320 g (11.3 oz.)	Approx. 510 g (18.0 oz.)
<b>Cable length</b>	Approx. 2.5 m (98.43")		
<b>Product warranty period</b>	3 years		
<b>Accessories</b>	Instruction Manual, Current Sensor Operating Precautions		

## Output Specifications and Measurement Specifications


### (1) Basic specifications

	CT7731	CT7736	CT7742
<b>Output connector</b>	Hioki PL14		
<b>Rated measurement current</b>	100 A AC/DC	600 A AC/DC	2000 A AC/DC
<b>Output rate</b>	1 mV/A	1 mV/A	0.1 mV/A
<b>Maximum measurement current</b>	RMS value, continuous: see "Frequency deratings" below. Peak value (under the RMS value conditions described above.): 150 A peak    900 A peak    2840 A peak		
<b>Frequency band</b>	DC to 5 kHz (-3 dB)		
<b>Measurable conductor diameter</b>	φ33 mm (φ1.30") or less	φ33 mm (φ1.30") or less	φ55 mm (φ2.17") or less
<b>Sampling frequency</b>	36.5 kHz ±0.2 kHz		
<b>Maximum rated voltage to earth</b>	600 V AC/DC (Measurement category IV)	1000 V AC/DC (Measurement category III) 600 V AC/DC (Measurement category IV)	
	Anticipated transient overvoltage: 8000 V		


### CT7731 Frequency derating

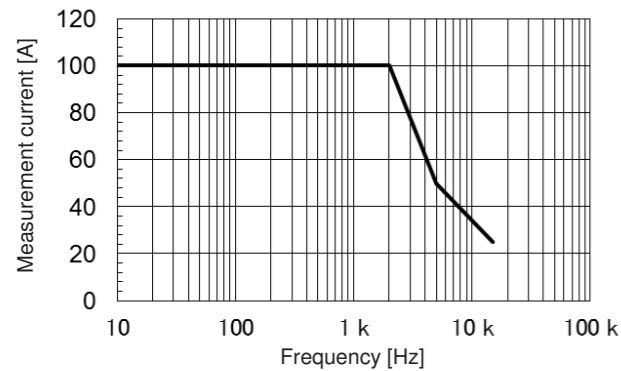

### CT7736 Frequency derating

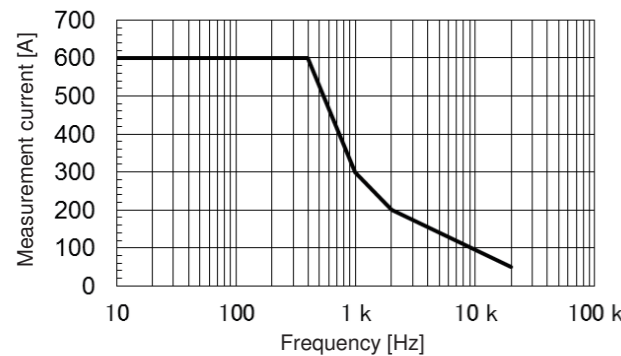

### CT7742 Frequency derating

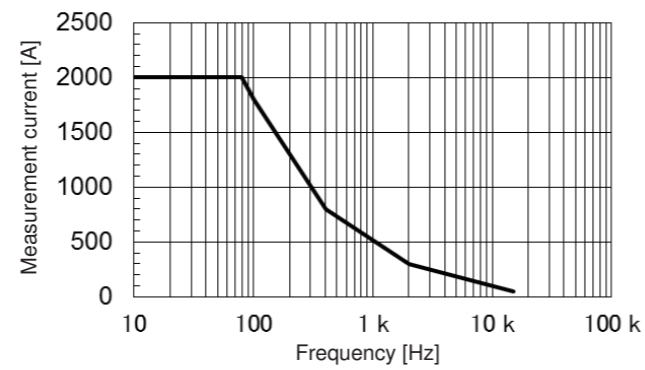

### (2) Accuracy specifications

f.s.: The rated measurement current.

rdg.: The value currently being measured and indicated on the measuring instrument.

	CT7731	CT7736	CT7742
<b>Conditions of guaranteed accuracy</b>	Guaranteed accuracy period: 3 years		
	Guaranteed accuracy period after adjustment made by Hioki: 3 years		
	Opening and closing of the jaw: 30000 times or less		
	Accuracy guarantee for temperature and humidity: 23°C±5°C (73°F±9°F), 80% RH or less		
	After performing zero-adjustment with the instrument to which the device is connected		
	Accuracy of AC measurement guaranteed for sine wave inputs		
<b>Measurement accuracy</b>	See separate table.		
<b>Temperature coefficient</b>	In the operating temperature range, add 0.1 × specified accuracy/°C (at temperatures other than 23°C±5°C).		
<b>Offset drift (Between -25°C and 65°C, Reference value: at 23°C)</b>	Within ±0.5% f.s.	Within ±0.1% f.s.	Within ±0.1% f.s.
<b>Effect of radiated radio-frequency electromagnetic field</b>			
	15% f.s. at 10 V/m		
<b>Effect of conducted radio-frequency electromagnetic field</b>			
	10% f.s. at 3 V		
<b>Effect of conductor position (deviation from center)</b>			
	Within ±1.5%	Within ±2.0%	Within ±1.0%
<b>Effect of external magnetic field (400 A/m, DC)</b>			
	Within ±1.5% f.s.	Within ±0.5% f.s.	Within ±0.2% f.s.
<b>Maximum cord extension length</b>	100 m (Depends on the instrument to which the device is to be connected.)		

### CT7731 Measurement accuracy

Frequency	DC	45 ≤ f ≤ 66 (Hz)	DC < f < 45, 66 < f ≤ 500 (Hz)
Amplitude (A)	I ≤ 80	±1.0% rdg. ±0.5% f.s.	±1.0% rdg. ±0.5% f.s.
	80 < I ≤ 100		±2.5% rdg. ±0.5% f.s.
Peak (A peak)	I peak  ≤ 110	±1.0% rdg. ±2% f.s.	±1.0% rdg. ±2% f.s.
	110 <  I peak  ≤ 150		±2.5% rdg. ±2% f.s.
Phase	-	±1.8 deg.	DC < f < 45 (Hz): ±1.8 deg. 66 < f ≤ 500 (Hz): Not defined.

### CT7736 Measurement accuracy

Frequency	DC	45 ≤ f ≤ 66 (Hz)	DC < f < 45, 66 < f ≤ 1 k (Hz)
Amplitude (A)		±2.0% rdg. ±0.5% f.s.	±2.0% rdg. ±0.5% f.s.
Peak (A peak)	I peak  ≤ 600	±2.0% rdg. ±0.7% f.s.	±2.0% rdg. ±0.7% f.s.
	600 <  I peak  ≤ 900	±4.0% rdg. ±0.7% f.s.	±4.0% rdg. ±0.7% f.s.
Phase	-	±1.8 deg.	DC < f < 45 (Hz): ±1.8 deg. 66 < f ≤ 1 k (Hz): Not defined.

### CT7742 Measurement accuracy


Frequency	DC	45 ≤ f ≤ 66 (Hz)	DC < f < 45, 66 < f ≤ 1 k (Hz)
Amplitude (A)	I ≤ 1800	±1.5% rdg. ±0.5% f.s.	±1.5% rdg. ±0.5% f.s.
	1800 < I ≤ 2000		±2.5% rdg. ±1.0% f.s.
Peak (A peak)	I peak  ≤ 2300	±1.5% rdg. ±1.0% f.s.	±1.5% rdg. ±1.0% f.s.
	2300 <  I peak  ≤ 2840	±6.0% rdg. ±1.5% f.s.	±6.0% rdg. ±1.5% f.s.
Phase	-	±2.3 deg.	DC < f < 45 (Hz): ±2.3 deg. 66 < f ≤ 1 k (Hz): Not defined.

"Peak input" is only available in conjunction with CM7290 Display Unit. For more information about the combination accuracy with the instrument, see the instrument's instruction manual.  
Amplitude accuracy design value is DC < f < 5 Hz. Phase accuracy design value is DC < f < 10 Hz.


## Zero-point Temperature Characteristics

Hall elements are subject to individual variation. Reference examples are provided below to illustrate zero-point variation (23°C reference) relative to temperature variations for each sensor. (There is also a variation in characteristics among individual products.) The operating temperature range is -25°C to 65°C (-13°F to 149°F). (See below for example characteristics.)

### CT7731

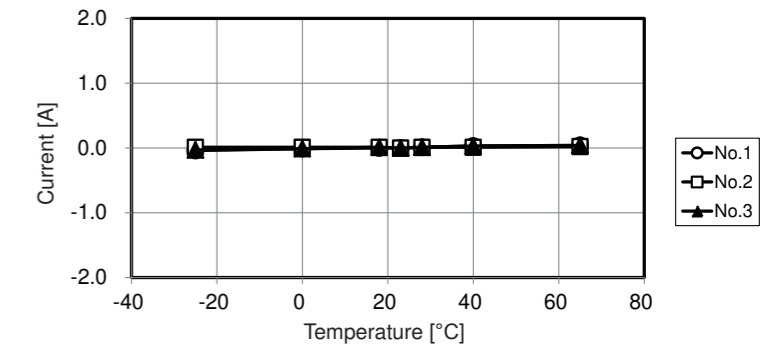

### CT7736

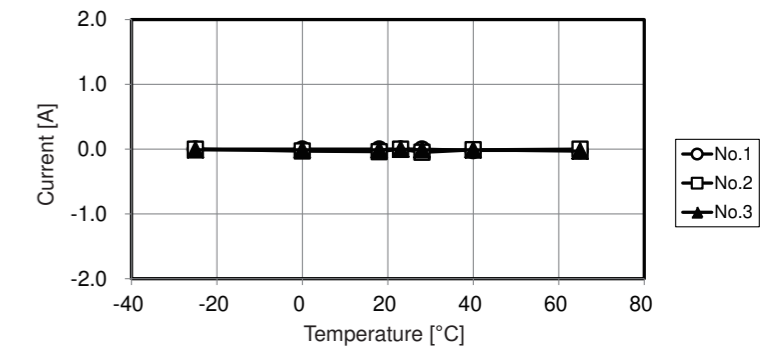

### CT7742

